

Quatro SPU DRAWER

PN: AA198 – Standard Drawer (no lock)

PN: AA199 Locking Drawer

(Drawers apply to SPU units with serial 30800 & higher)



Remove screws
that are already installed
on SPU

Keep and re-use these
screws to install
DRAWER SUPPORT

Drawer can be
installed on either
side of SPU
(or BOTH)

Installation:

- 1) Remove screws beneath the SPU where shown above (already installed in your SPU)
- 2) Align DRAWER SUPPORT with holes and re-insert screws through the holes into SPU
- 3) Once DRAWER SUPPORT is screwed to UNDERSIDE, THEN slide DRAWER into support

AA198 – Non Locking drawer

- slide drawer into support with hole in drawer facing rear

AA199 – LOCKING DRAWER

- 1) Slide drawer into support with lock/lock opening facing front
- 2) Lock keys are supplied in the drawer
- 3) To purchase replacement lock Assembly (PN: AR119), call QUATRO
- 4) Locking Drawer includes (2) keys

We Make Clean Air